

Fitting

Please read all of this instruction before installing the splashback.

The manufacture disclaims all liabilities for any damage or injury caused as a result of not following this instruction leaflet.

This splashback is designed to fit on the wall behind your range cooker.

The wall should be flat and clear of any obstructions.

⚠ Take care, the splashback is heavy and we recommend at least two people should fit it.

⚠ Beware of sharp edges. Use gloves when handling the splashback.

⚠ Before drilling the wall check that there are no electrical cables or pipe work in the wall in the fixing areas.

The splashback should be fitted **AFTER** the cooker has been installed and **BEFORE** an extractor hood is fitted.

To Fit the Splashback

 
You will need the following equipment to complete the splashback installation satisfactorily

- A pencil or marker
- A rule
- A drill
- A 7 mm masonry drill
- A cross point screwdriver
- Rawl plugs and screws or; if fixing to a hollow construction plaster, special plaster board fixing screws or plugs.


In order to fit the splashback at the correct height the cooker must first be installed, set to the correct height and levelled.

If the cooker has a short cooker splashback fitted remove it. It can be refitted later if required.

Mark the wall behind the cooker at the flue grille height.

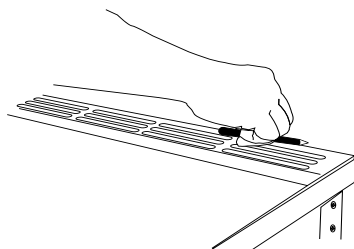


 Move the cooker forward. Measure down 38 mm from the your marks and draw a line.

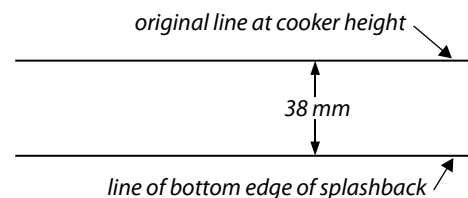


This dimension will position the splash plate as shown in (1).

 If you want to mount the splashback lower as in (2), please be aware that you will have to move the cooker forwards.

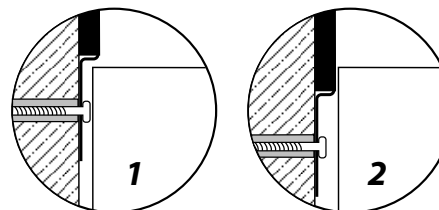

 Hold the splashback in position with bottom edge level with the lower line.

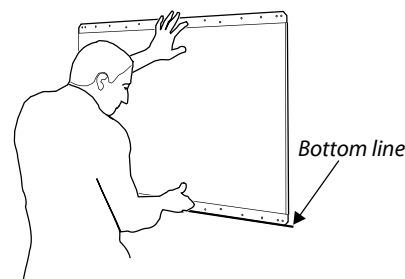

Mark the position of the fixing holes on the wall.

At least 6 screws must be used to hold the splashback – 3 at the top and 3 at the bottom.

Remove the splashback and drill the wall using a 7 mm masonry bit. Using suitable rawl plugs and screws, secure the splashback into position.

Note: When fitting a cookerhood along with a splashback, please refer to the cookerhood instructions for important fitting dimensions.

Care of your Splashback

Cleaning

NEVER USE PAINT SOLVENTS, WASHING SODA, CAUSTIC CLEANERS, BIOLOGICAL POWDERS, BLEACH, CHLORINE BASED BLEACH CLEANERS, COARSE ABRASIVES OR SALT.

Enamelled splashback

The vitreous enamelled surface can normally be cleaned using clean hot water and a liquid detergent. For any stubborn stains use a nylon scouring pad or a well moistened soap pad.

Aerosols can be used but the product **MUST** be suitable for enamel surfaces and the manufacturers instructions **MUST** be followed.

Stainless steel splashback

For best results use a proprietary liquid detergent.

Avoid using any abrasive cleaners including cream cleaners on brushed stainless steel surfaces.