

Glass Splashback

Fitting

Please read all of this instruction before installing the splashback.

The manufacturer disclaims all liabilities for any damage or injury caused as a result of not following this instruction leaflet.

This splashback is designed to fit on the wall behind your range cooker.

⚠ It is made of toughened safety glass – any localised pressure on the glass may cause it to shatter.

The wall should be flat, non-porous, dry, dust free and clear of any obstructions.

If it is not, the wall must be made good before proceeding.

⚠ DO NOT under any circumstances attempt to cut or drill into the glass splashback, as this will cause the glass to shatter.

⚠ DO NOT use any other form of adhesive other than silicone.


To Fit the Splashback

In order to fit the splashback at the correct height the cooker must first be installed, set to the correct height and levelled.

1. Ensure that the wall to which the splashback will be applied is flat, non-porous, dry, dust free and clear of any obstructions.
2. Mark out the position of the splashback.

A space of at least 2mm should be left between the splashback and all surrounding surfaces. Tile spacers can be used to achieve a good fit.


⚠ DO NOT fit the splashback so that it is in contact with the cooker. When the cooker is moved it may shatter the glass (Fig.1.1).

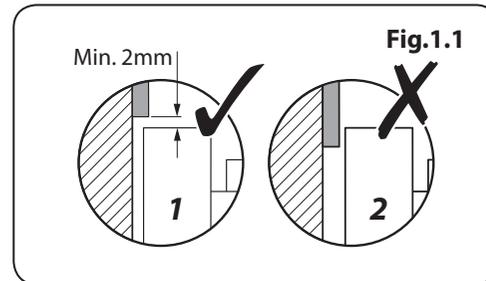

3. It is advisable to fix a piece of timber to support the splashback whilst the adhesive cures.

4. Carefully rest the splashback, face down on a suitable surface and apply a clear/neutral silicone adhesive.

Do not apply the adhesive too close to the edges and apply in several smaller pieces, rather than single lengths (Fig.1.2).

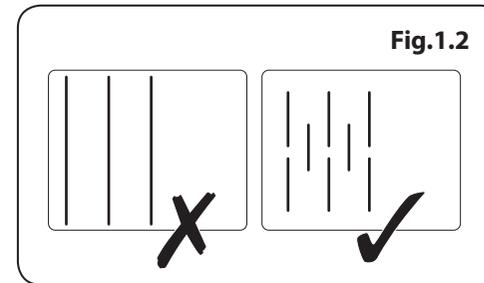

5. Line the splash back up with the timber baton and gently push the splashback onto the wall. Apply pressure over the entire surface, ensuring the adhesive spreads out on the back.
6. Wait for the adhesive to cure (18 - 24 hours) and remove the timber baton.
7. Once fitted correctly the splashback should now be sealed by applying a bead of silicone around its perimeter.

As the silicone will take about 18 - 24 hours to cure. **DO NOT** attempt to move or clean the splashback during this period.

Cleaning

Do not use abrasive cleaners.

For best results use warm soapy water with a soft cloth.

CONSUMER SERVICE

If you have any product enquiries, or in the event of a problem with your splashback once it has been installed, please telephone:

0800 804 6261

or depending on your mobile network tariff you can call free on **0370 789 5107**.

CONSUMER SERVICE LINES OPEN:

Monday to Thursday	8am–6pm
Friday	8am–5pm
Saturday	9am–1pm